

950CB, 953CB and 956CB Security Plus remote controls work with the following models.

The following models have a Red or Orange learn button:


| | | | | | | | | |
|--------|----------|---------|---------|-------|----------|---------|--------|---------|
| 1200 | 6200-2DB | 8200-2 | 4620 | 7902K | PD200 | PD420 | PD212 | WD822K |
| 2200 | 6200-2K | 8200-2K | 4640 | 9902 | PD200-2 | PD420-2 | PD610 | WD912K |
| 4200 | 7220 | 9200 | 4640-2 | 9950 | PD600 | PD460 | PD612 | WD922K |
| 6200 | 7420 | 9200-2K | 4640-2K | 9960 | PD600-2 | CG40 | PD612K | PD460-2 |
| 6200-2 | 8200 | 9500-3K | 7902 | PD100 | PD600-2K | PD210 | PD752 | CSO |

Programming Security Plus Remote Controls

Thank you for your recent inquiry regarding your Chamberlain/Lift Master Garage Door Opener. Following is a set of instructions for programming your current remote control or adding an additional remote control.


1

Locate the LEARN BUTTON on the back or side panel of the motor unit. You may need to remove a light cover or control panel cover to gain access. This button will be green and will have an LED indicator light next to it.

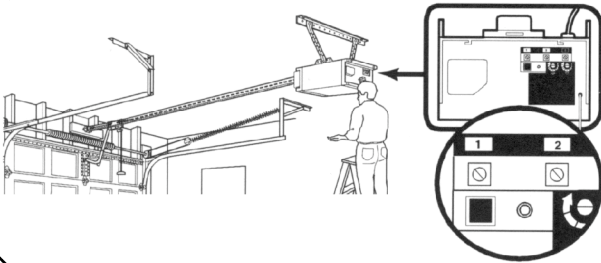


2

Press and release the LEARN BUTTON. The LED indicator light will glow steadily for 30 seconds.

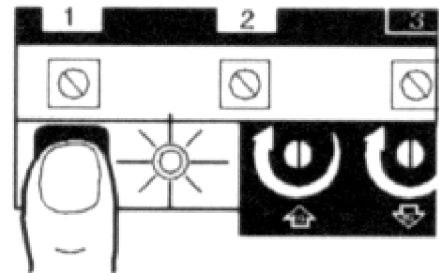

3

Within this 30 second period, press and hold the button on the hand-held remote.

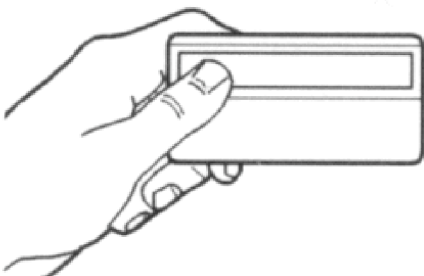

4

Release the button when the motor unit lights blink. It has learned the code. If light bulbs are not installed, two clicks will be heard.

