


QUALITY ^{RIEDEL} DOORS AND OPENERS

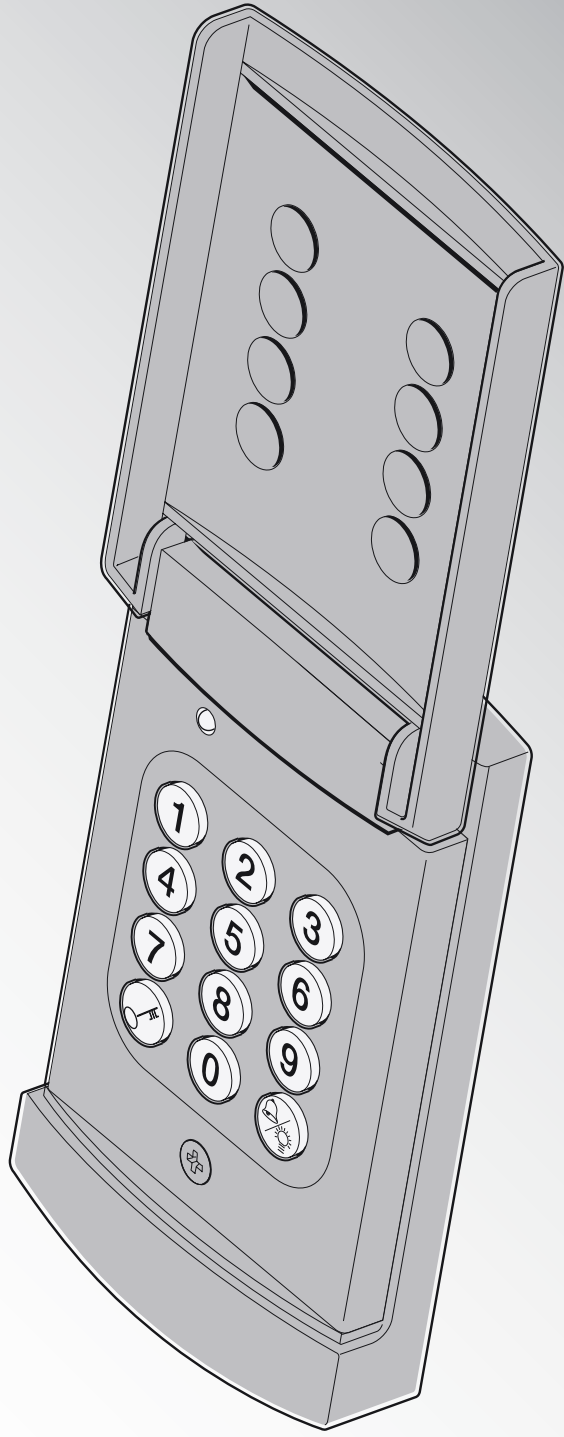

Quick Operating Instruction
Hörmann Covered Wireless Keypad Model FCT3b

PROGRAMMING AND USE OF THE RADIO KEYPAD FCT3b IN 315 MHz:



WARNING

- The FCT3b must be installed in sight of the door but away from any moving parts.
- The FCT3b must be installed out of reach of children (minimum height: 5ft).

NOTE:

Always wait for the light of the keypad to be off before starting new program operations. Make sure that the antenna of the operator is fully extended and guided away from any metal.

Learning the keypad to the operator: (out of the box or after a factory reset)

- Press and release the “P” button on the operator; don’t keep it pressed for more than half a second.
- Have a distance of at least 5ft from the operator.
- On the keypad, press and release slowly in sequence 1 2 3 4 [Key].

After this 1 2 3 4 [Key] will open / close the door. Test the function.

With a second or third operator do the same but with the codes 2345 or 3456.

Change first access code: (wait for the keypad light to be off before starting)

- Press and release the [Key] button.
- Enter 1 2 3 4 [valid access code]
- Press and release the [Key] button.
- Enter a new access code (4 digits).
- Press and release the [Key] button.

After this the new code followed by pressing the [Key] button will operate the door. Test the function.

Change second access code: (wait for the keypad light to be off before starting)

- Press and release the [Key] button 2 times
- Enter 2 3 4 5 [valid access code]
- Press and release the [Key] button.
- Enter a new access code (4 digits only).
- Press and release the [Key] button.

After this the new code followed by pressing the [Key] button will operate the door. Test the function.

Change third access code: (wait for the keypad light to be off before starting)

- Press and release the [Key] button 3 times
- Enter 3 4 5 6 [valid access code]
- Press and release the [Key] button.
- Enter a new access code (4 digits only).
- Press and release the [Key] button.

After this the new code followed by pressing the [Key] button will operate the door. Test the function

PROGRAMMING AND USE OF THE RADIO KEYPAD FCT3b IN 315 MHz:

Changing the battery:

- Open the cover and remove the Phillips screw at the bottom of the keypad. \
- Disconnect the old battery.
- Press any button of the keypad to drain it.
- Reconnect the new battery.

All access codes are kept during battery changes. No need to reset or to reprogram the keypad.

Remarks:

After a successful entry of an access code, the code stays active in the keypad for 15 seconds. During that time pressing any button (except the bell/light button) will transmit the signal again.

Wait for the keypad light to go off before trying to program the next code or making a new operator learn the keypad.

Don't press the buttons on the keypad too quickly when you enter a code sequence – always look for the red LED to come on and go off when you press and release a button.

The operator can store up to 12 radio codes. If you try to teach more than 12 radio codes the first learned radio code will be deleted.

To delete all the radio codes in the operator manually: Press and hold the [P] button on the operator for about 5 seconds until the operator beeps.

To reset the keypad back to factory settings:

Disconnect the battery. Press and hold the [0] button while reconnecting the battery, keep holding the [0] button until the red LED on the keypad stops flashing. After the reset all access codes will be reset to factory default and the keypad needs to be relearned by the operator.

Battery:

To check if the battery has still enough power to operate the keypad, press and hold the [bell light button] for a couple of seconds. The red LED of the keypad should flash rapidly while the button is pressed (but not for more than 15 seconds). If the red LED just gives a brief flash when you press the [bell light button], the battery needs to be replaced. If the brightness of the keypad back light varies during the transmission of a radio code or while pressing the [bell light] button the battery should be replaced also.

Everything you've always wanted in a garage door, and more.



German Engineered, American Made

Our promise to you.

As one of the world's leading manufacturers of doors, we're committed to providing the best quality, value, and selection. Whether residential or commercial, whether steel or high density polyethylene,

whether traditional or contemporary, we have the door you're looking for. Each Hörmann door gives you the perfect array of benefits and options, with the drive to match.



Hörmann LLC, Montgomery, IL



Hörmann LLC, Vonore, TN



Hörmann Flexon LLC, Leetsdale, PA

For assistance and service call 1 877 OK HORMANN (1-877-654-6762)



Environmental commitment has been part of our corporate culture for decades, from our manufacturing processes to the products we make.

In everything we do, we strive to minimize energy and resource use, through efficient processes long-lasting quality and innovative engineering.

Hörmann LLC, 5050 Baseline Road, Montgomery, Illinois 60538
Phone: 630-859-3000 Toll-Free: 1 877 OK HORMANN (1-877-654-6762)
Fax: 630-859-8122 Email: info@hormann.us www.hormann.us

